

## SINGLE COLOR LED DIMMER – 4 ZONE TOUCH PANEL WALL REMOTE INSTALL GUIDE

### 1. Features

We adopt a high-precision capacitive touch screen IC. The touch screen is very stable; 2.4GHz high RF wireless control with long distance controlling, low power consumption and high-speed transmitting rate.

This product has B series, and the difference is the method of power supply. Both series have 4 kinds: B1 4-zone dimmable panel remote; B2 CCT 4-zone panel remote; B3 4-zone RGB/RGBW panel remote; B4 4-zone RGB+CCT panel remote. This product widely works on our smart LED Lighting, LED controller and smart panel controller, etc.

### 2. Parameters

#### **B Series: Powered by 3V(2\*AAA Battery)**

Working Voltage: 3V(2\*AAA Battery)

 
Standby Power Consumption: 20uA

Transmitting Power: 6dBm

Transmission Frequency: 2.4GHz

Working Temp.: -10~40°C


Control Distance: 98.4 ft

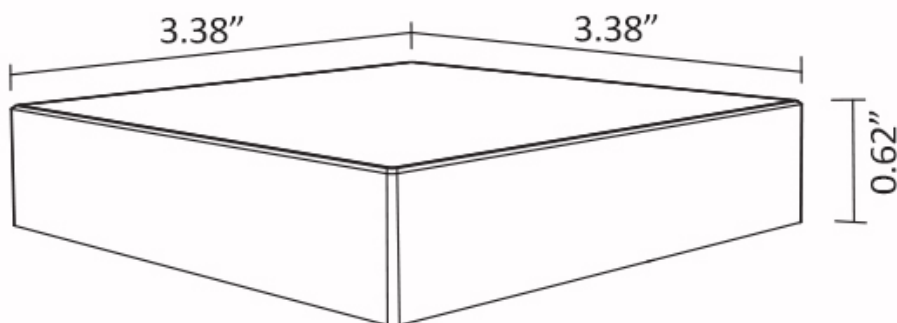

## 2. Funtion of keys

**Remark:** When touching the button, LED indicating lamp will flash once with different sound (Touch slider with no sound).
 
### B1& B1-B 4-Zone Panel Remote (Brightness)

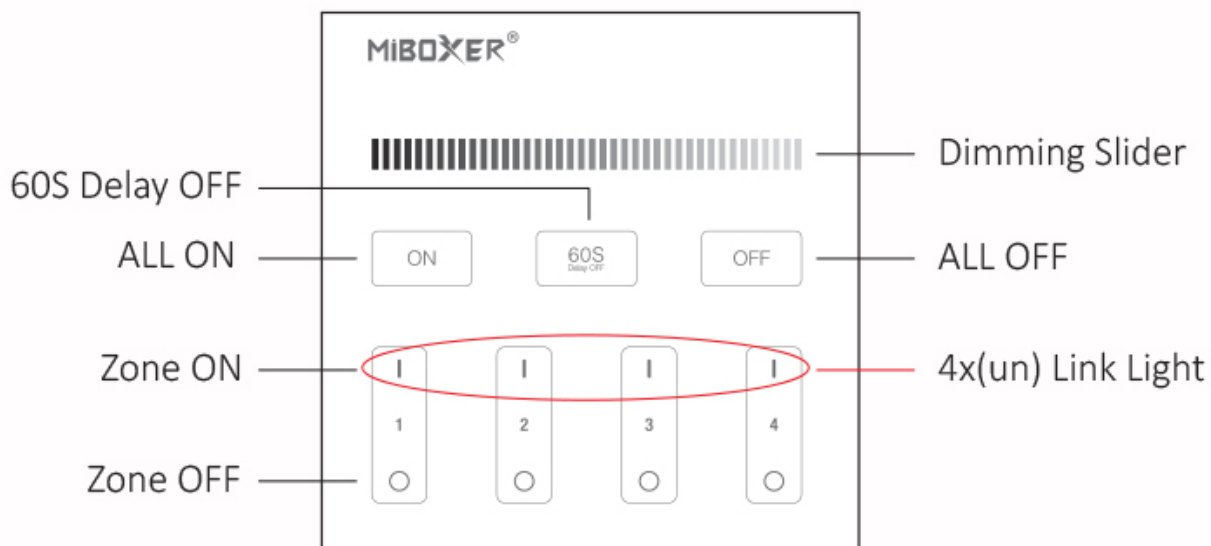

▄▄▄▄▄▄▄▄▄▄▄▄ Touch dimming slider to change the brightness from 1~100%.

ON Touch master ON, turn on all linked lights.  
Long press 5 seconds to turn ON the indicating sound.

60S Delay OFF When the light is ON, press "60S Delay OFF", the light will be OFF  
Automatically after 60 seconds.




OFF Touch master OFF, turn off all linked lights.  
Long press 5 seconds to turn OFF the indicating sound.

| Touch Zone ON, turn on zone-linked lights.

○ Touch Zone OFF, turn off zone-linked lights.

### 3. Link / Unlink
   
#### Linking Instructions

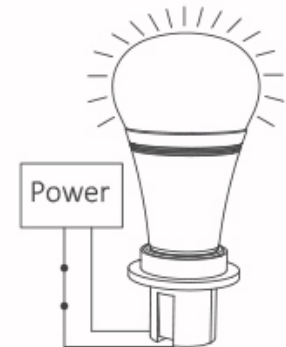
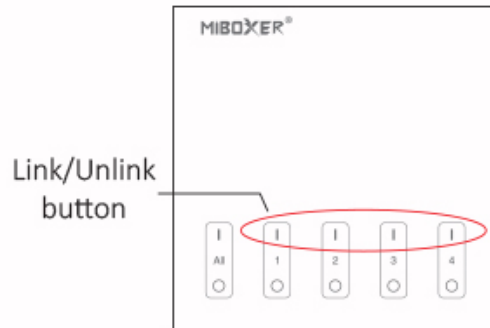
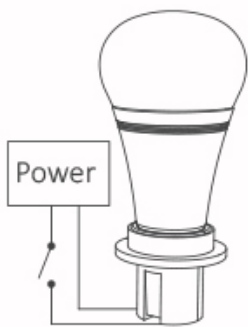


- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press any zone of "1" 3 times within 3 seconds.
- 3 The light blink 3 times slowly means the linking is done successfully.



If the light not blink slowly, the linking failed, pls switch off the light again, and follow the above steps again.

#### Unlinking Instructions

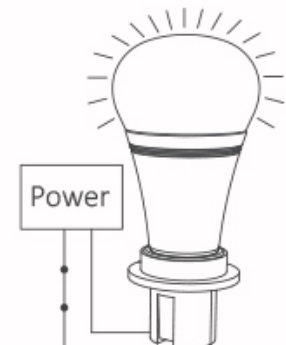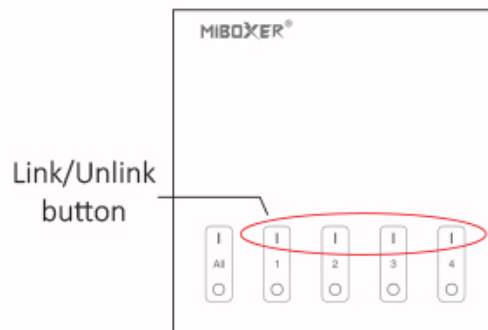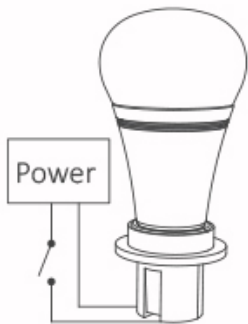   

- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press "1" 5 times within 3 seconds.
- 3 The light blinking 10 times quickly, means the unlinking successfully.




**Unlinking must be the same zone with the Linking**



   If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

### 3. Link / Unlink

#### Linking Instructions

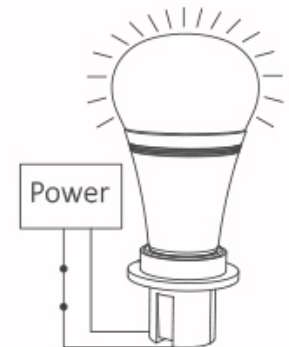
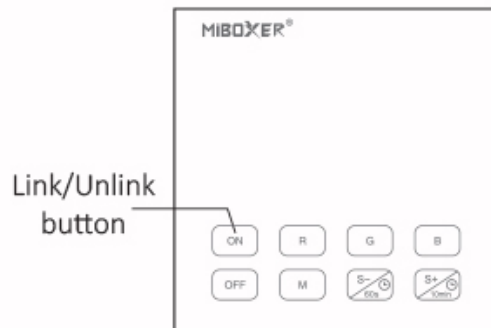
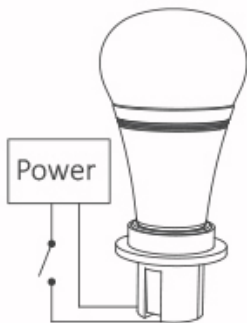


- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press "ON" 3 times within 3 seconds.
- 3 The light blink 3 times slowly means the linking is done successfully.



If the light not blink slowly, the linking failed, pls switch off the light again, and follow the above steps again.

#### Unlinking Instructions

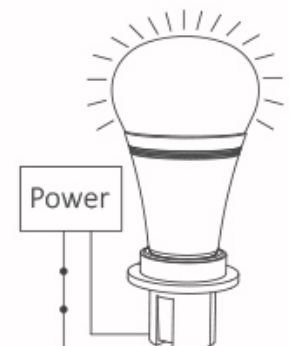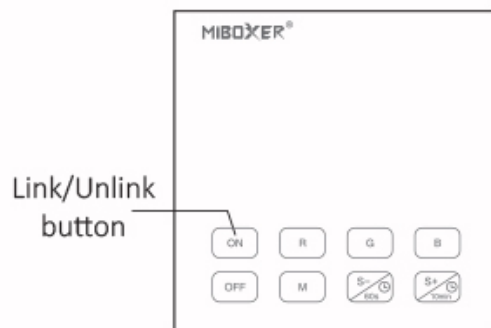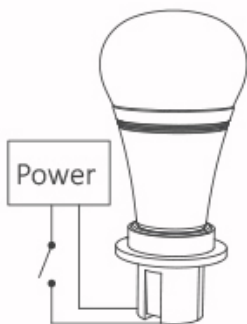   


- 1 Switch off the light, after 10 seconds switch on again.
- 2 When the light on, short press "ON" 5 times within 3 seconds.
- 3 The light blinking 10 times quickly, means the unlinking successfully.




If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

## 4. Installation

 
### B series Installation

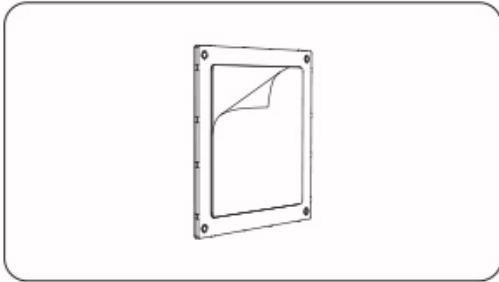

 
1. Tear out the back tape.

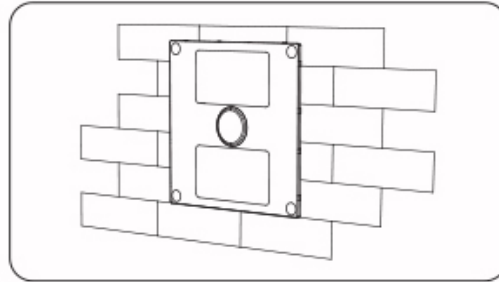

 2. Stick the holder on the position where you want.

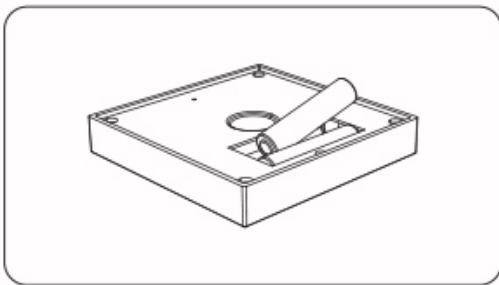

 3. Install 2\*AAA battery.

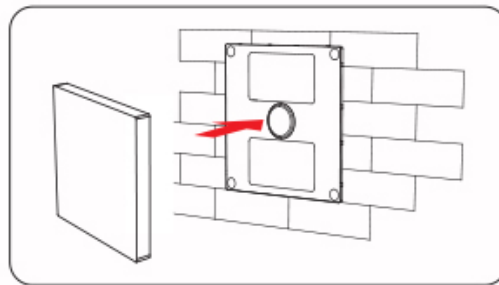

4. Put the rotating switch on the front of holder.